

## Schaefferstown Fire Co

### Tractor Pull Rules

1. Tractors must be registered and weighed to pull.
2. Tractors must be operated in a safe manner at all times.
3. A number indicating the class and order of the pull will be assigned to each tractor at registration and weigh in.
4. The driver must start the pull with a tight chain and at the starting signal from the flag man.
5. A hand throttle must control speed only. String, wires or foot feeds will not be allowed.
6. Drivers must remain on the seat and maintain full control of the tractor during pull.
7. Tractors losing weight or other objects while hooked to the sled will be disqualified.
8. Tractors must stay within the pull boundaries.
9. If a tractor stops or stalls in the first 20 feet, the pull may be restarted or the tractor may pull at the end of the class - at the discretion of the driver.
10. Tractors must stop at the red flag signal from the flagman.
11. All decisions of the Pulling Committee are final. Any arguments will result in automatic disqualification.

**ALL PARTICIPANTS PULL AT THEIR OWN RISK!**

**PLEASE KEEP SAFETY IN MIND AND HAVE FUN!**

## Antique Class

Tractors must be model year 1965 or earlier to participate in the antique tractor pull.

Tractors must be wheel driven by two wheels only.

## Inspection

Tractors will be inspected during registration and weigh in by the pull committee. Any tractors found to be unsafe or in violation of the rules will not be allowed to pull.

## Drawbar

The drawbar must be original or match factory specifications with a maximum height of 18 inches. The length of the drawbar must be a minimum of 24 inches from the center of rear axle to hook point. The drawbar must be rigid with no more than 1 inch of movement in any direction. Use of flat plate with 3 inch hole or twisted clevis only.

## Weights

May add weights to make class. Weight brackets must be bolted on. Weight must be securely fastened.

## Tires and Rims

Rim diameters may not be larger than factory specifications. Steel wheels cut down and converted to rubber shall have rims no longer than factory specifications. The use of dual wheels will not be allowed. Tires two sizes over standard size will be permitted. Steel wheels will not be permitted. Wheel rims and lugs must be to factory specifications. No cut tires.

## R.P.M.

R.P.M. maximum of 10% over factory subject to check at anytime.

## Classic Class

Tractors 1966-1980. All antique rules apply to classic's

## Open Class

Tractors not conforming to above specifications may pull in open class with a maximum drawbar height of 20 inches and a minimum of 18 inches from center of axle. A maximum tire size of 18.4 inch X 38 inch will be allowed. No turbo chargers.

## Entry Fee

All classes \$15.00 per hook.